

Near
360

USER GUIDE

Thank You For Wearing N-ear

N-ear products are made from the finest materials in the world. This is the reason that all of our products come with a 3-year warranty and a 120-day 100% refund policy with no questions asked.

Our Commitment To You

It is our goal for you to enjoy your N-ear 360 so much, you choose to continue using N-ear products long into the future. Our products have many adaptors, cables and PTT's to change along with the requirements of all your radio needs.

Made To Last

The N-ear 360 earpieces are made to be worn daily and for long periods at a time. They hold firmly in your ear and are approved for in-ear performance against moisture and wear and tear.

One Of a Kind

N-ear 360 has 5 *Patents* on the earpiece alone. There is nothing on the market today that comes close to matching the sound, durability, and performance. They are so discreet and comfortable that it will be hard to go back to acoustic tube kits after wearing N-ear.

Turn Down Your Volume

For your hearing protection and to avoid damaging the armature micro speaker in your N-ear 360:

***ALWAYS TURN DOWN YOUR RADIO
VOLUME BEFORE YOU TURN
YOUR RADIO ON.***

You can't blow the speaker in a traditional way, however, you can damage the sound bar inside of the micro-speaker that creates the crystal clear sound.

Your Hearing Protection is Your Responsibility

The use of any communication device offers benefits and risks. To avoid hearing damage, you should not be exposed to Sound Pressure Levels above 115dB(A). For more information visit the OSHA website at www.osha.gov

Maximum Exposure Time:
dB Level:

8hr.	4hr.	2hr.	1hr.	30min	15min	7.5m
85	88	91	94	97	100	103

Left or Right Identification

The N-ear 360 is right (R) and/or left (L) ear specific. The way you can tell if you have a right or left is to look for blue or red numbers on the speaker housing at the end of your earpiece.


Red = Right
and
Blue = Left



How To Insert and Remove the N-ear 360

The N-ear 360 is made to wear in the ear. The micro-speaker and ear tip sit balanced in the ear canal while allowing full situational balance to external sounds.

Loop the bend over the ear and gently insert or remove ear tip piece into the ear canal.

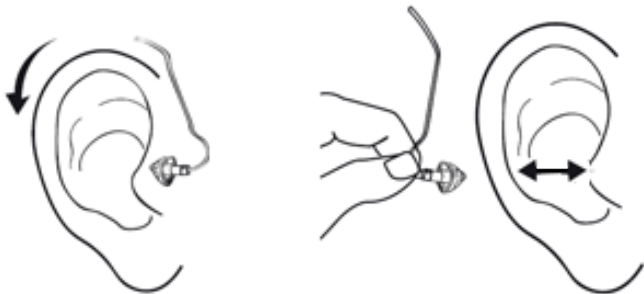


How To Replace Ear Tip

Gently insert the ear tip onto the speaker that's at the end of the line. Please note the ear tip will snap firmly into place.



Care and Maintenance

We recommend storing your N-ear 360 in the provided case. In the event of poor sound quality due to earwax in the sound bore, please change the earwax filter. Never use any other object to attempt to remove the earwax as this may result in damage to the N-ear 360 and will void the warranty. Use the black filter applicator to add and remove the ear wax filter if needed. Approximately once every six months.

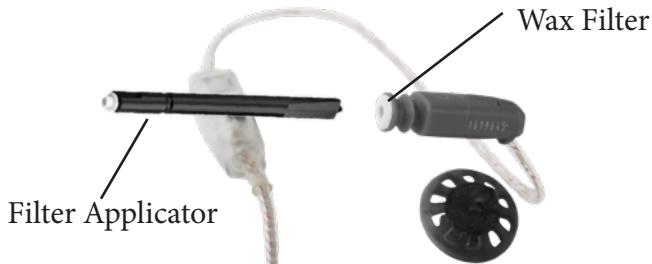

Moisture Care

The N-ear 360 is made to sit in your ear and is approved for moisture from your ear and can even be worn in the rain, however, do not put your earpiece underwater. Do not put your N-ear 360 into wet ears. Try to keep them as dry as possible.

Should you inadvertently allow water or perspiration into the ear tip, allow them to dry completely before attempting to use it again. Minor moisture build-up should dry out and not affect long-term performance. Extended exposure to moisture or submersion will result in permanent damage (not covered by warranty).

Warranty and Liability

N-ear does not cover problems or damage resulting from (1) accident, abuse, misapplication, or any unauthorized repair, modification or disassembly; (2) improper operation or maintenance, usage not in accordance with product instructions or connection to improper voltage supply; or (3) use of consumables, such as cords. If purchased under a government contract, those contract terms supersede terms stated herein.

N • ear

360

N-ear.com
877-290-4599
support@n-ear.com